



SEVEN POLSKA S.C.
R. Goldmann, K. Sarnat-Hoffman
ul. Metalowa 1,
62-095 Murowana Goślina, Poland
www.sevenpolska.com

Warning / Ostrzeżenie / Uprozornění / Uprozornenie
Vigilant / Предупреждение / Attention
Uprozorenje / Uprozorenje / Warning / Предупреждение:



EN Made in China / PL Wyprodukowano w Chinach / CZ Vyrobeno v Číně / SK Vyrobené v Číne / HU Gyártási hely: Kína
BG Made in China / RO Wyprodukowano w Chinach / HR Vyrobeno v Číně / SRB Vyrobené v Číne / DE Hergestellt in China / RU сделано в Китае

ENG THREE WHEEL SCOOTER – INSTRUCTION MANUAL

Three-wheel scooter is designed for outdoor play. It has good influence to the child's condition, develops coordination and balance.

Important information: Please read the manual instruction before installation and use of the scooter.

1. Before use a scooter by child, an adult should read the warnings.
2. Compliance with the instructions will ensure safe use of the scooter and will improve its durability.
3. This product is designed for children over 2 years of age.
4. Installation must be carried out only by an adult.
5. The use of a scooter is only permitted under the supervision of an adult. Use of this product requires child to have specific skills to avoid falling and colliding, which may result in injury to the user and third parties. The product should be used according to child's age and for its intended purpose only.

WARNING!


1. Warning. Protective equipment should be worn. Not to be used in traffic. 20 kg max.
2. While riding please use protective equipment such as helmet, gloves, knee-pads and elbow-pads. Protectors reduce the risk of injury but do not guarantee 100% protection.
3. The scooter is designed for use in open areas, flat surface, dry, free from obstacles, non slippery, clear from sand or gravel. Do not use in bad weather conditions (rain, snow), in good visibility (eg do not use after dark), in traffic, near water reservoirs, stairs, steep areas and other places likely to pose a risk of accident. While using extra caution should be paid to obstacles such as road bumps, canals, tram rails, etc. It is forbidden to drive on public roads.
4. It is necessary to ensure that all locking devices are engaged.
5. While use, the steering wheel must always be held at all times with both hands.
6. Supervision of an adult while use of the scooter is required. The child must be taught how to use the scooter. Particular attention should be paid to the child in the first stages of driving a scooter. Avoid excessive speed. When driving in slope terrain, the speed must be controlled so the scooter can be stopped at any time. Braking should be carried out smoothly, without a sudden stop, which may result in loss of balance and fall. Stop or slow down before making a turn, turning with a high speed may cause a fall. While use make extra caution watch out for other people around you, especially children.
7. Scooter can be used by one person at the time, product can hold maximum weight of 20 kg.
8. While using a scooter, sportswear and flat shoes is recommended
9. Manual Kit contains small parts. There is a risk of choking. Keep small, loose parts and packaging out of the reach of children. Before assembling the scooter, check the completeness of the kit and make sure that the parts are not damaged. If something is damaged or does not work properly, it should be replaced before using the product. Regularly check all the screw connections before each ride and ensure that all scooter components work properly. In case of cracks or damage to parts of the scooter - immediately replace them with new ones.

KIT CONTENTS:

- telescopic handlebar
- non-slip board with wheels
- allen keys



MOUNTING SCHEME:

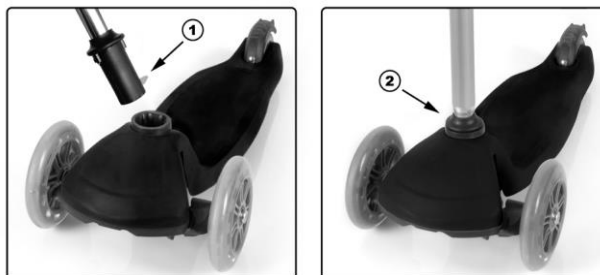

MOUNTING OF THE HANDLEBAR:

1. Push the red button on the bottom of the steering wheel and slide it into the hole on the front of the scooter board until it clicks..
2. Make sure the steering wheel is locked.

ADJUSTABLE STEERING WHEEL:

The scooter has 3 levels of handlebar height adjustment 61-66-71cm. Use metal clamps to adjust the handlebar. To change the height of the handlebar follow the instructions below:

1. Unlock the metal clamp by opening it. 2. Adjust the height of the handlebar to height of the child by pressing the button on the steering wheel and adjust it to the appropriate height. Make sure that the buttons on the handlebar are in the steering wheel holes, you should hear a click.
3. Lock securely metal clamp by closing it and make sure that it is not possible to unlock it accidentally.

DISMOUNTING A HANDLEBAR:

1. Push the red button at the bottom of the handlebar, located to the left under the handlebar, and pull the steering wheel out of the securing hole.

MAINTENANCE:

The scooter should be cleaned regularly. All maintenance should be carried out by an adult. Clean the scooter with a damp cloth or sponge. Do not use strong detergents or solvents. Protect the product against moisture, high and very low temperatures. Regularly check: Steering wheel height, wheel condition, is mounting not loosened. If cracks occur the wheels are worn out it must be replaced with new ones so the safety of the child is not threatened. Regularly check the condition of the screw connections, all elements should be well-fitted and tightened. During transport scooter must be folded. the scooter in a folded position. Use original carton for transportation.

Declaration: Seven Polska declares that the product complies with the requirements of the standard EN 71.

Thank you for choosing our product.

